

## Contents

### *Introduction*

Installing Release O	1.2
Hardware	1.5
Release O overview	1.6

### *General enhancements*

Remote controls	2.2
Entering values and text	2.6
Sample-to-Memory module	2.8
The Optical Disk display	2.9
The Sound File Directory	2.24
The Sound File Editor	2.29
The Recorder Display	2.34
The Monitor module	2.36
Sequencer enhancements	2.38

### *Macintosh II*

Introduction	3.2
Setting up	3.4
Starting the system	3.12
Backing up the NED System Disk	3.18
Activating the Real-Time Performance system	3.20
Using the trackball in the Real-Time Performance system	3.28
Ending a session	3.32

### *The Sequence Editor*

General enhancements	4.2
New commands	4.10

### *The Direct-to-Disk system*

Direct-to-Disk outputs	5.2
Output volume control	5.13
Direct-to-Disk inputs	5.16
Bounce	5.20
Digital transfer	5.34
The Track Display	5.56
The Selection panel	5.60
The Project Manager panel	5.62
The Cue Editor panel	5.66
Editing and playing cues from the terminal keyboard	5.76
Remote control units	5.88

(con't next page)



## ***Contents (con't)***

<i>The 64-voice poly system</i>	
Introduction	6.2
Assigning poly bins	6.10
Sampling	6.16
<i>Music Printing addendum</i>	
Introduction	7.2
Printers	7.5
Menu changes	7.8
Changes to the Editor	7.17
Changes to the Symbol Editor	7.30
The Guitar Frame Editor	7.31
The Laser Communicator	7.35
Setting the baud rate	7.43
Troubleshooting the laser printer	7.47
Music Printing command and symbol summary	7.49

